



Dyson DC58 Bin Replacement

This guide will show you how to replace a broken or damaged bin from a Dyson DC58.

Written By: Ian Sloan




INTRODUCTION

This guide will show you how to open and replace the bin of your Dyson DC58.

Step 1 — Bin



- Make sure your vacuum is unplugged

 Avoid pressing the red trigger on the vacuum handle, this will power on the vacuum

Step 2



- Locate the red lever parallel to the red trigger and on the side of the clear bin.

Step 3



- Push the red lever downward to open the clear bin. You may need to do this over a trash bin if there is debris in the clear bin.

Step 4



- Push the red lever downward again while pulling the clear bin away from the main body of the Dyson vacuum.

To reassemble your device, follow these instructions in reverse order.

